




4 PCS  JCBC BOLT M6 x 55mm	4 PCS  7 HOLE L-BRACKET	4 PCS  DECO CAPS	16 PCS  19mm CB SCREW
---	--	--	--

1

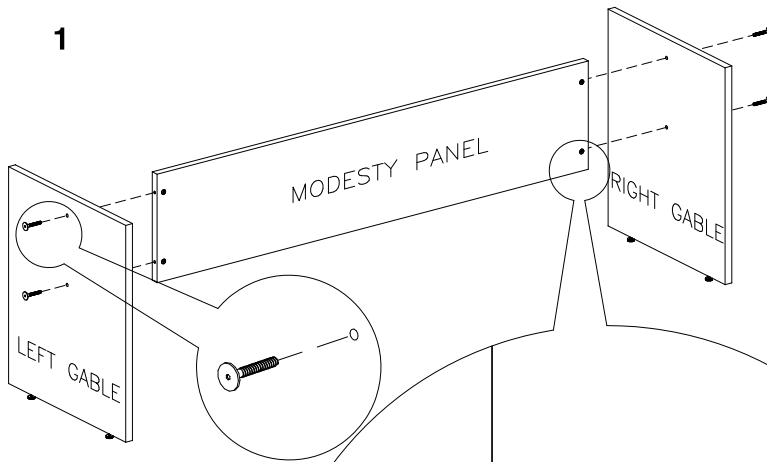


**USE JCBC BOLT TO CONNECT
GABLES TO MODESTY PANEL**

2

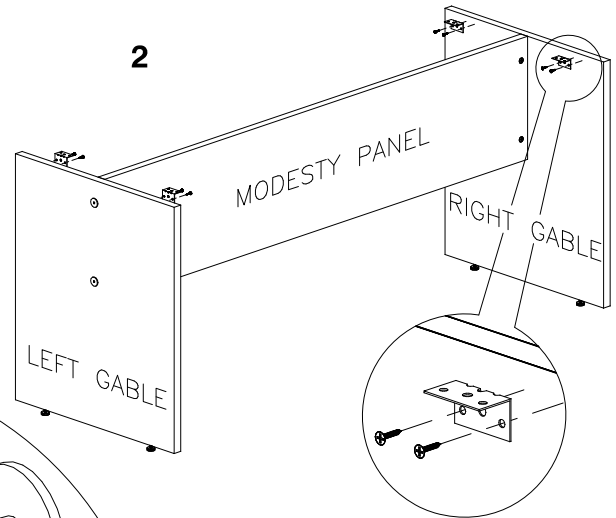

MOUNT 7 HOLE BRACKETS

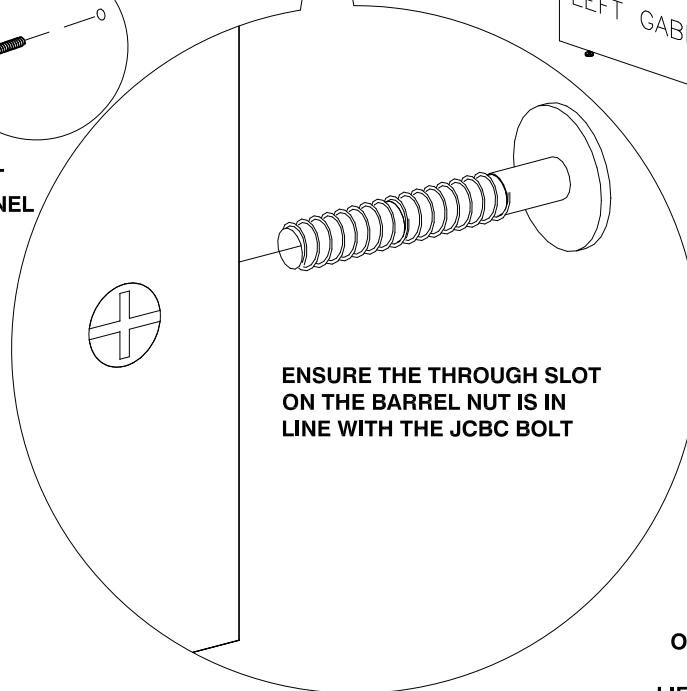


**ENSURE THE THROUGH SLOT
ON THE BARREL NUT IS IN
LINE WITH THE JCBC BOLT**

CAUTION:

**OFFICE FURNITURE IS HEAVY. ENSURE THAT
YOU HAVE ADEQUATE ASSISTANCE WHEN
LIFTING AND MOVING PARTS AND ASSEMBLIES.
KEEP HARDWARE OUT OF REACH OF CHILDREN.**


3

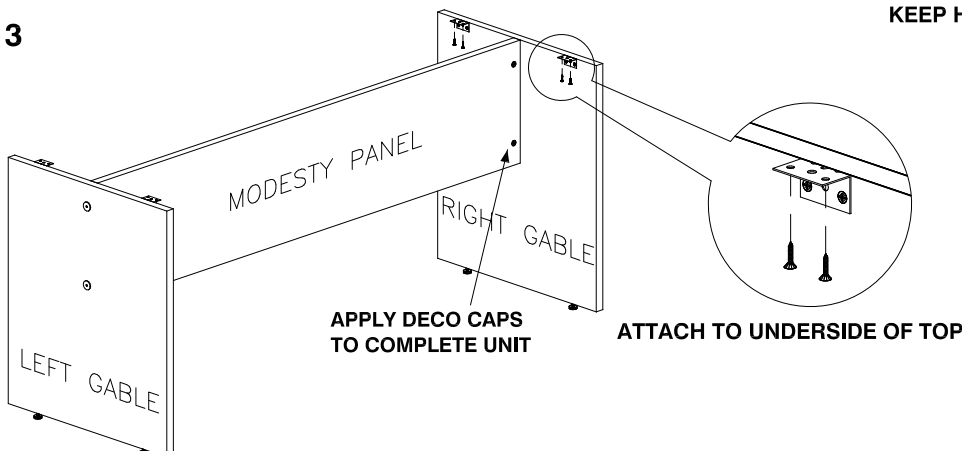


**APPLY DECO CAPS
TO COMPLETE UNIT**

ATTACH TO UNDERSIDE OF TOP

**QUESTIONS OR CONCERNS ?
PHONE Customer Service
1-866-567-3060
M-F 7am - 4:30 pm PST**

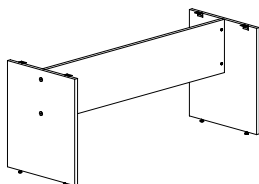

4 PCS  VIS DE TYPE JCBC M6 DE 55mm	4 PCS  FERRURES EN «L» À 7 TROUS	4 PCS  CACHE-VIS	16 PCS  VIS DE TYPE CB DE 19mm
---	---	---	---

